

BEFORE YOU BEGIN

Do not cut parts off frame before studying each picture thoroughly. Before cutting, match each part number (located on small tabs on the frame) with the corresponding number in each assembly diagram.

Now starting with step 1, use your safety scissors to cut the parts off the frame as needed. Remove excess plastic where part was cut from frame.










Continue to put your Zoid® together part by part. They snap together and do not require glue. When you're done just wind him up and watch the action start.

AVANT DE COMMENCER

Ne pas découper les pièces avant d'avoir bien étudié chaque illustration. Avant de découper, appairer chaque numéro de pièce (petites languettes situées sur le cadre) avec les numéros correspondants de chaque illustration.

Étape 1. Se servir de ciseaux à bouts ronds pour découper au fur et à mesure les pièces du cadre. Enlever l'excès de plastique.

Assembler le Zoid® pièce par pièce. Aucune colle n'est requise pour assembler les pièces. Lorsque le Zoid® est assemblé le remonter et le laisser aller.

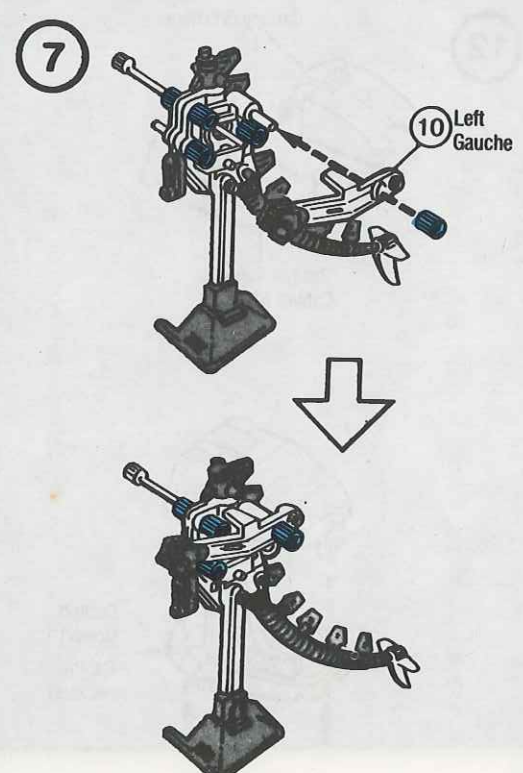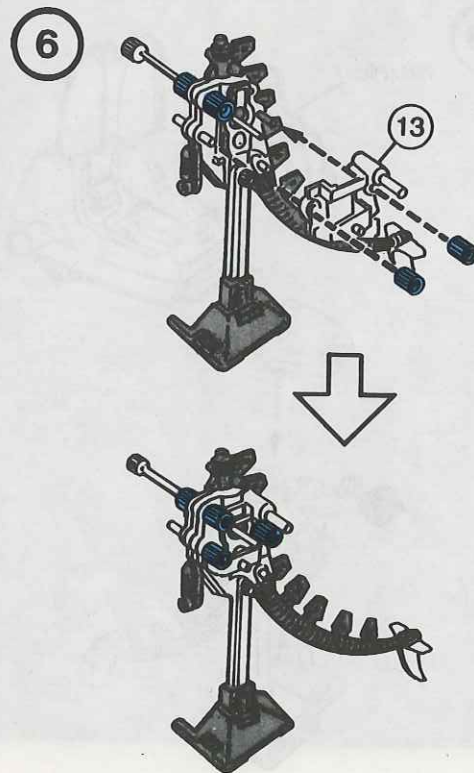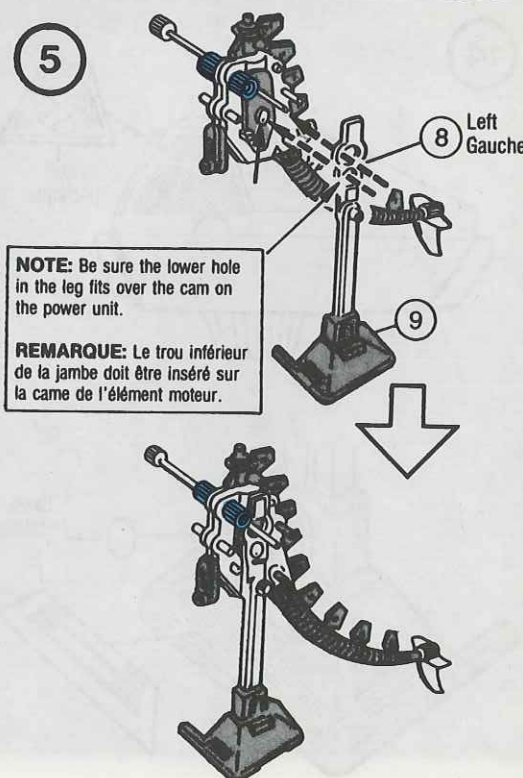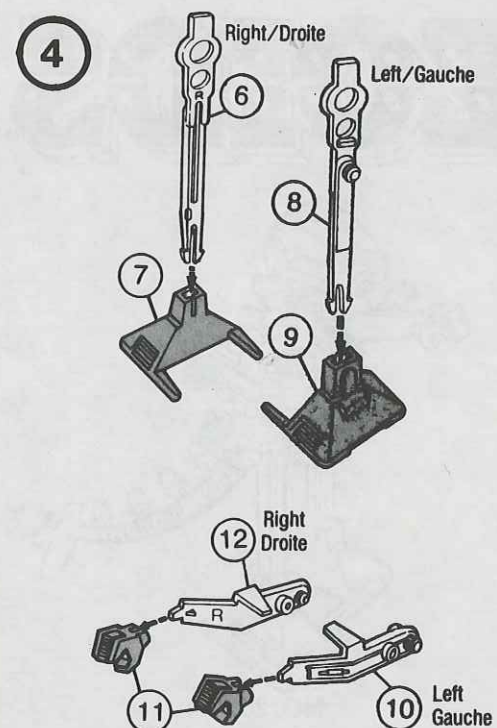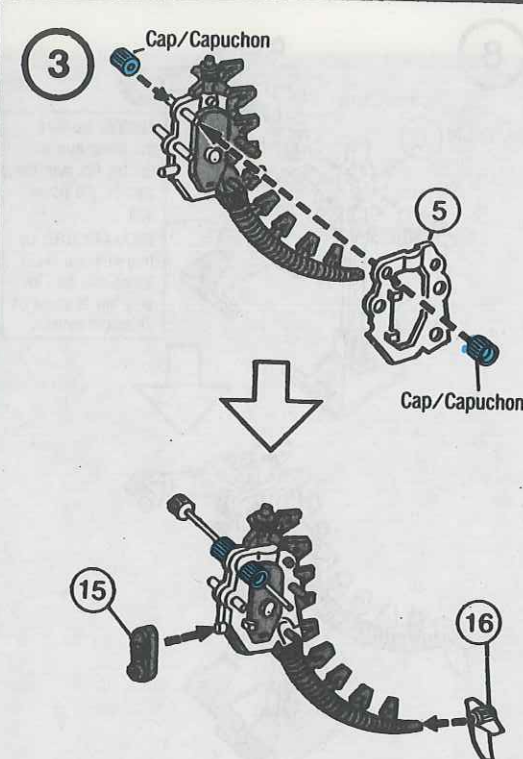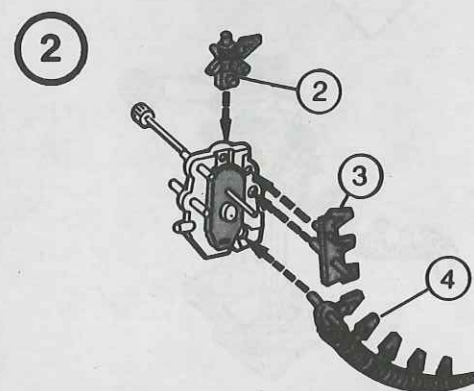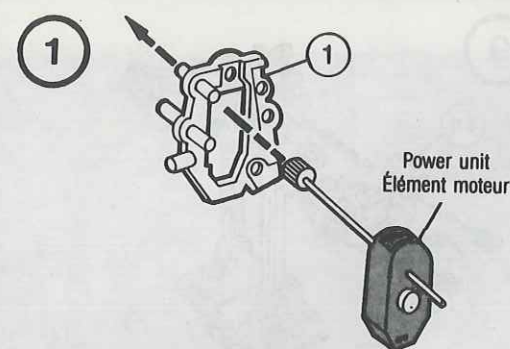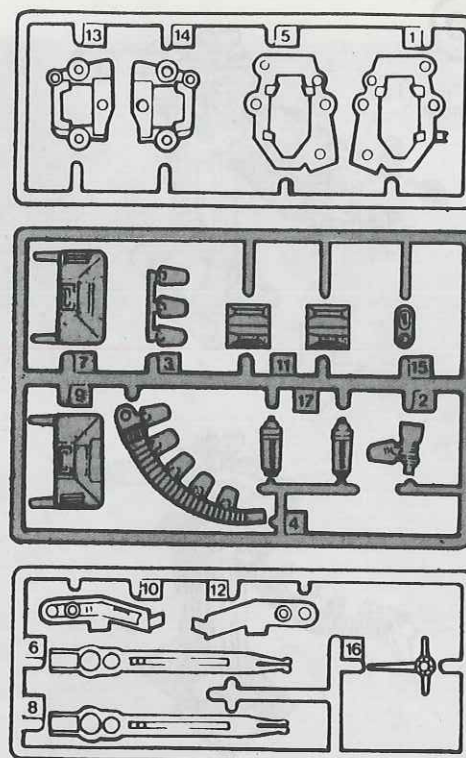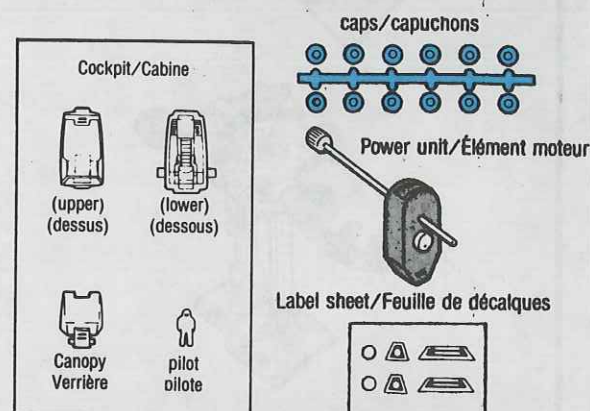

8

Cam/Came

Right/Droite

6

7

NOTE: Be sure the lower hole in the leg fits over the cam on the power unit.

REMARQUE: Le trou inférieur de la jambe doit être inséré sur la came de l'élément moteur.

9

14

10

Right/Droite

12

11

17

12

Canopy/Verrière

Cockpit (upper)
Cabine (dessus)

Cockpit (lower)
Cabine (dessous)

13

Pilot/Pilote

14

Label Décalque

Label Décalque

ZOIDS

NO. 2559

TOMY